

THE ASIC/2-7540 AND THE ASIC/2-8540 CAN PROVIDE DIRECT ACCESS TO EITHER THE SYSTEM BUS OR THE LOCAL BUS, PROVIDED UPON THE POSITION OF THE SHUNT PINS W3 AND W4.

The RS-232 connection is shown on an ASIC/2-7540 in Figure 1. The RS-232 port can be used to connect an external modem, and EtherLink/2, or a PC directly. Check other application drawings for specifics of these applications. The RS-232 specification limits the overall RS-232 cable length to no more than 50 feet.

IF THE PINS ARE SHUNTED BETWEEN NUMBERS 2 AND 3, THIS PUTS THE RS-232 CONNECTION ON THE LOCAL BUS. THIS CONDITION IS SHOWN IN FIGURE 2. WHEN THE PINS ARE IN THIS POSITION, THE ASIC/2 WILL BE ACCESSED USING IT'S LOCAL BUS ADDRESS, AND ANY ASI CONTROLLERS ON THE LOCAL BUS CAN BE ACCESSED DIRECTLY. IT IS NOT POSSIBLE TO ACCESS THE SYSTEM BUS AT ALL.

IF THE PINS ARE SHUNTED BETWEEN NUMBERS 1 AND 2, THIS PUTS THE RS 232 CONNECTION ON THE SYSTEM BUS. THIS CONDITION IS SHOWN IN FIGURE 3. WHEN THE PINS ARE IN THIS POSITION, THE ASIC/2 WILL BE ACCESSED USING IT'S SYSTEM BUS ADDRESS. ANY ASI CONTROLLERS ON THE LOCAL BUS, CAN BE ACCESSED USING THE ASIC/2 PASS-THROUGH FEATURE, PROVIDED THE ASIC/2 IS PROPERLY CONFIGURED FOR SUCH. THE SYSTEM BUS CAN ALSO BE ACCESSED. CHECK OTHER APPLICATION DRAWINGS FOR THE SPECIFICS ON SYSTEM BUS COMMUNICATION USING RS-232.

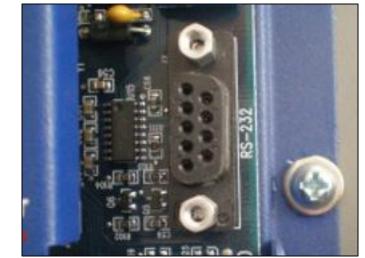






Figure 1

Figure 2

Figure 3

TITLE ASIC/2 RS-232 CONNECTION OVERVIEW			
DATE	2008-DEC-06	Rev	None
DRAWN BY	PDL	SCALE	None
NUMBER	ASI-3		



ASI CONTROLS 2202 CAMINO RAMON SAN RAMON, CA 94583-1328 Ph. 925-866-8808 Fax 925-866-1369 www.asicontrols.com

